

1/8

FIG 1.

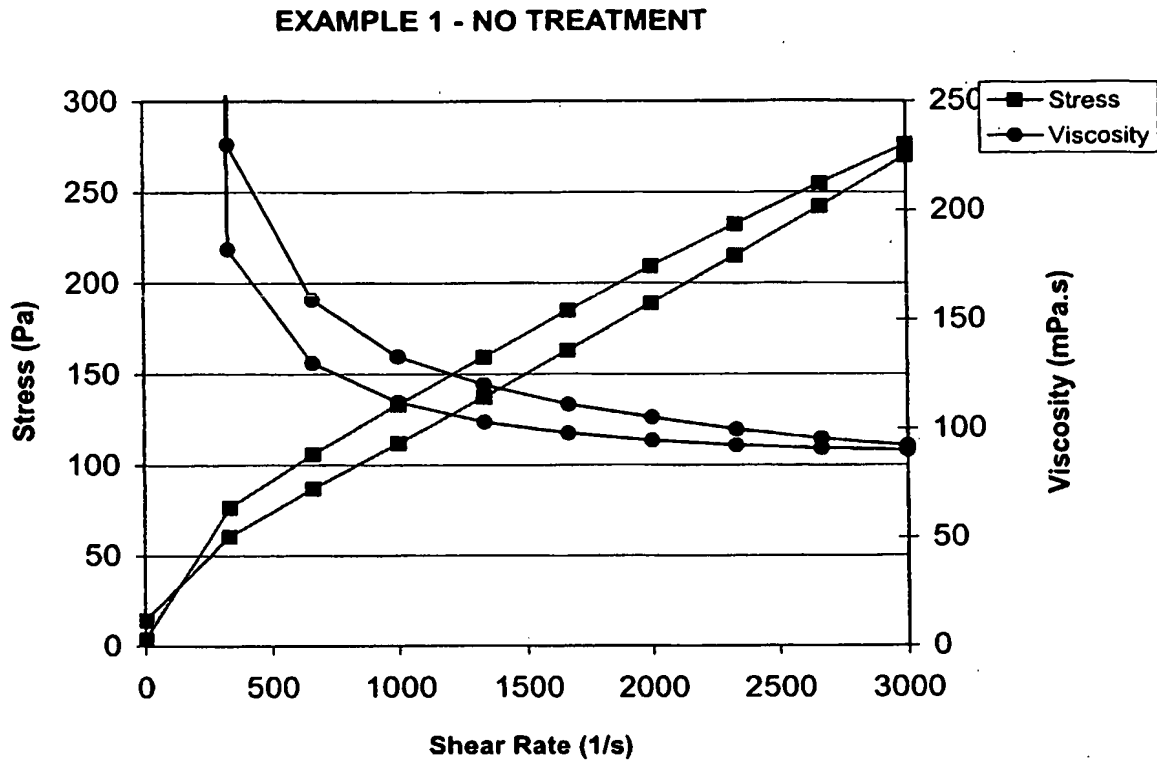
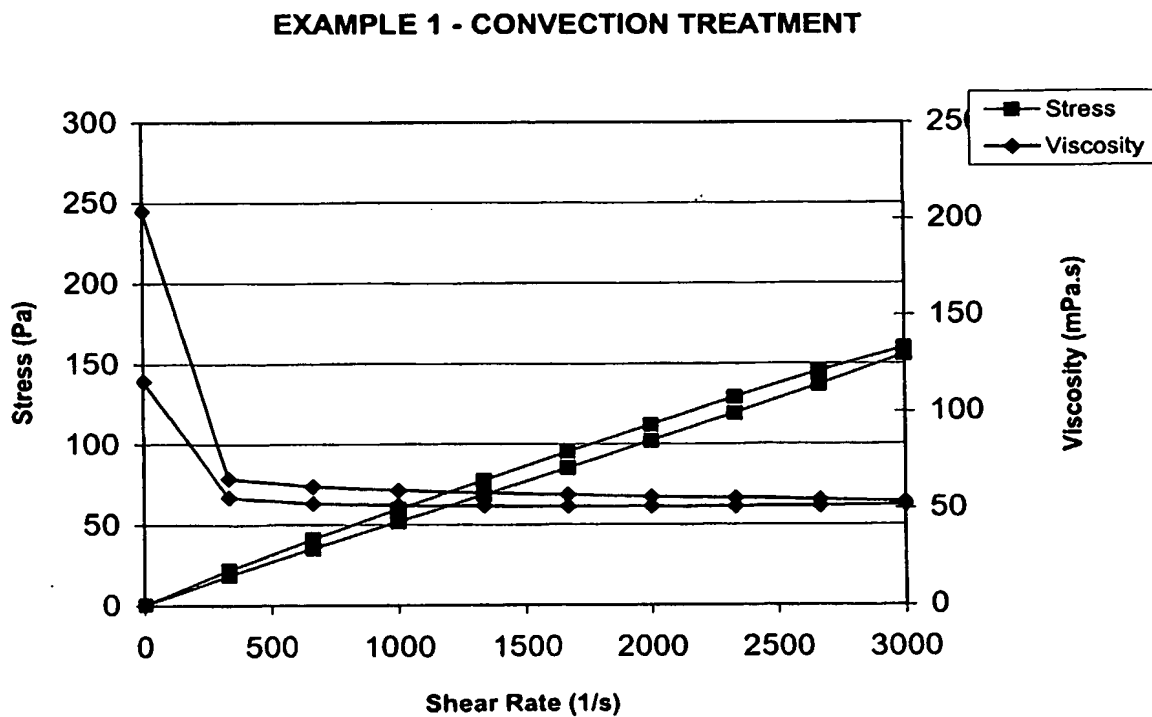


FIG. 2



2/8

FIG. 3

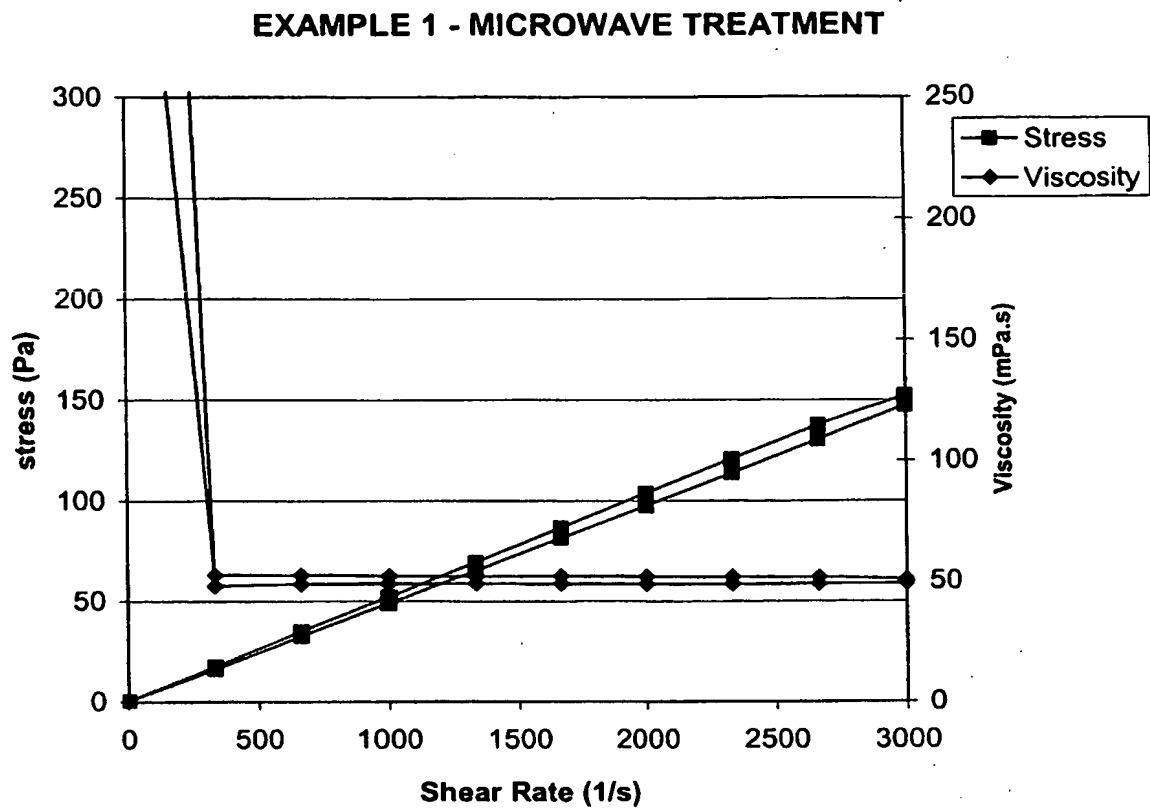
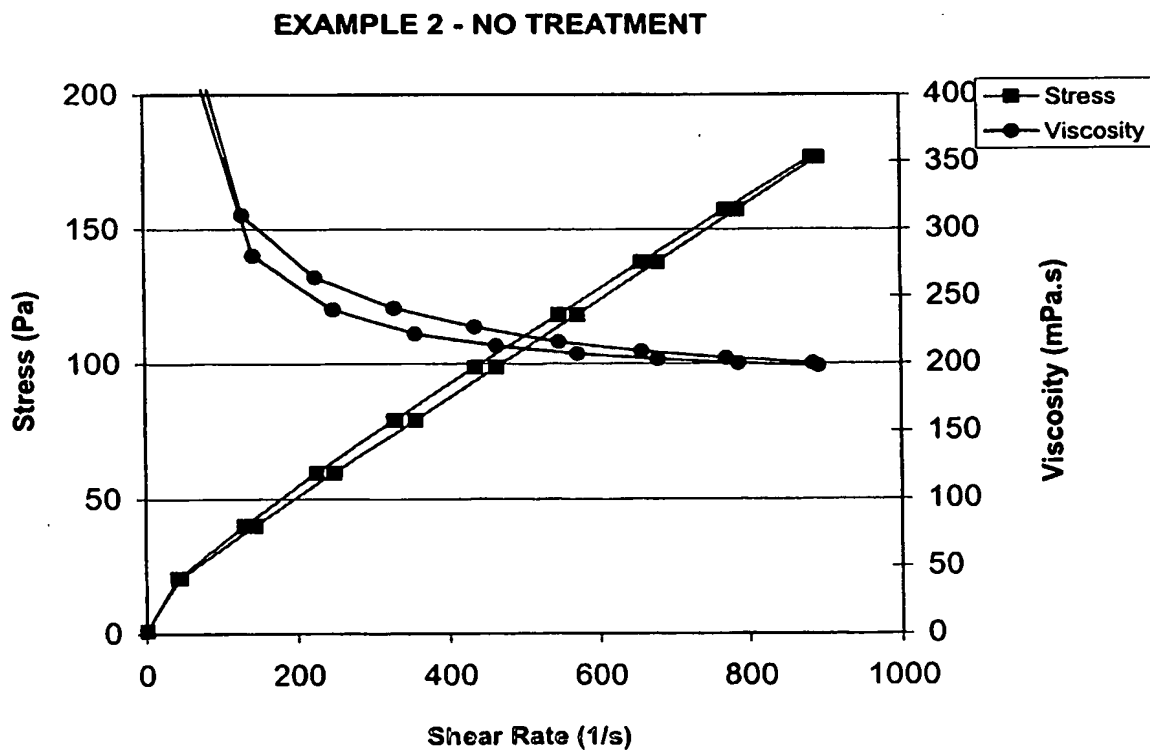


FIG. 4



BEST AVAILABLE COPY

3/8

FIG. 5

## EXAMPLE 2 - CONVECTION TREATMENT

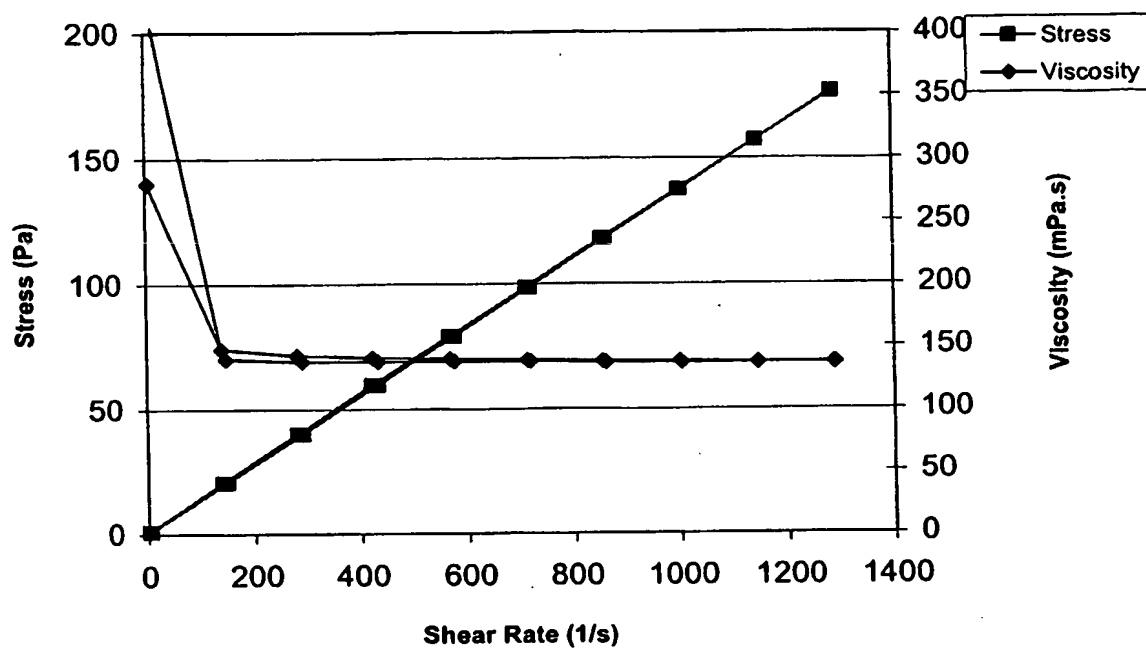


FIG. 6

## EXAMPLE 2 - MICROWAVE TREATMENT

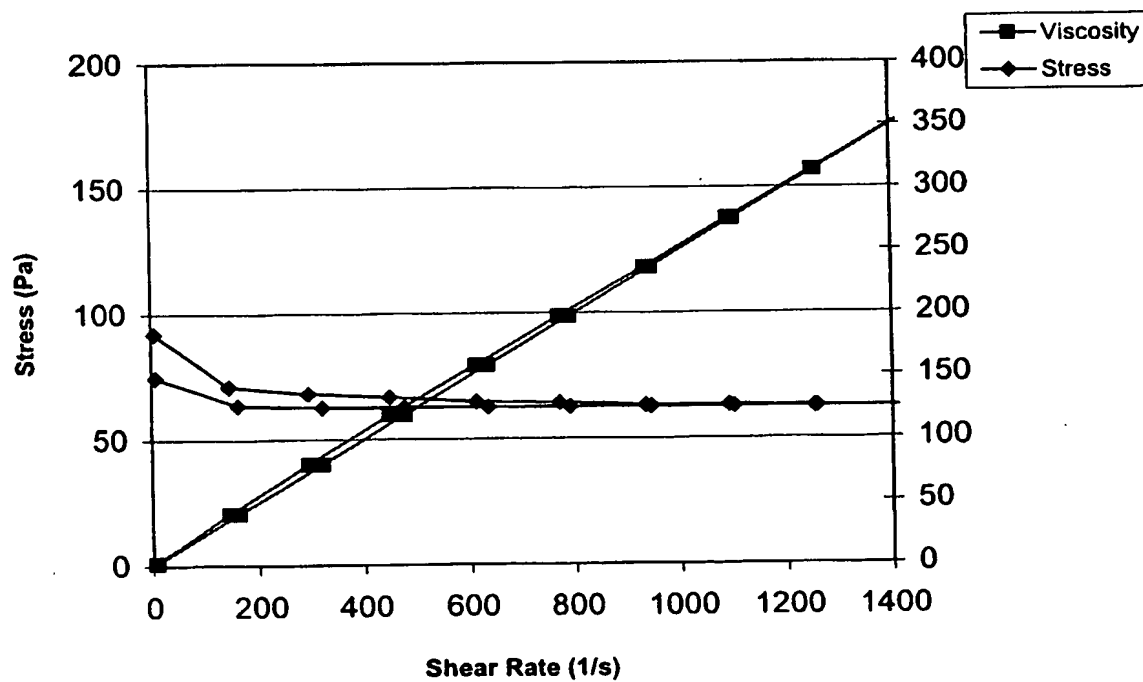


FIG. 7

BEST AVAILABLE COPY

4/8

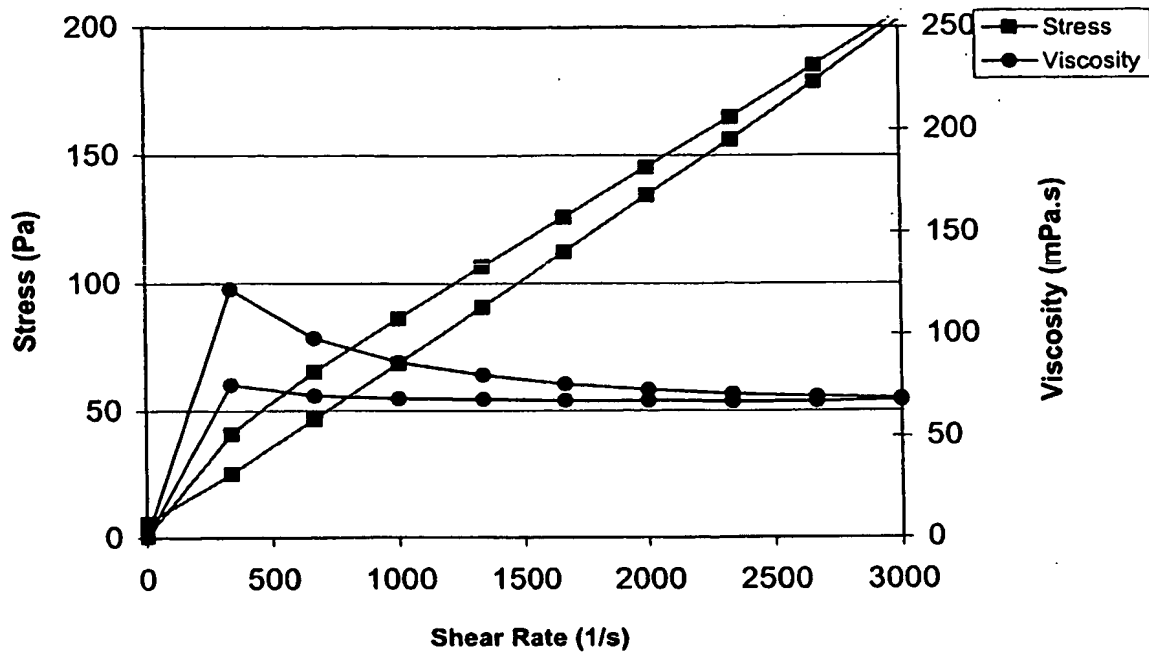
**EXAMPLE 3 - NO TREATMENT**

FIG. 8

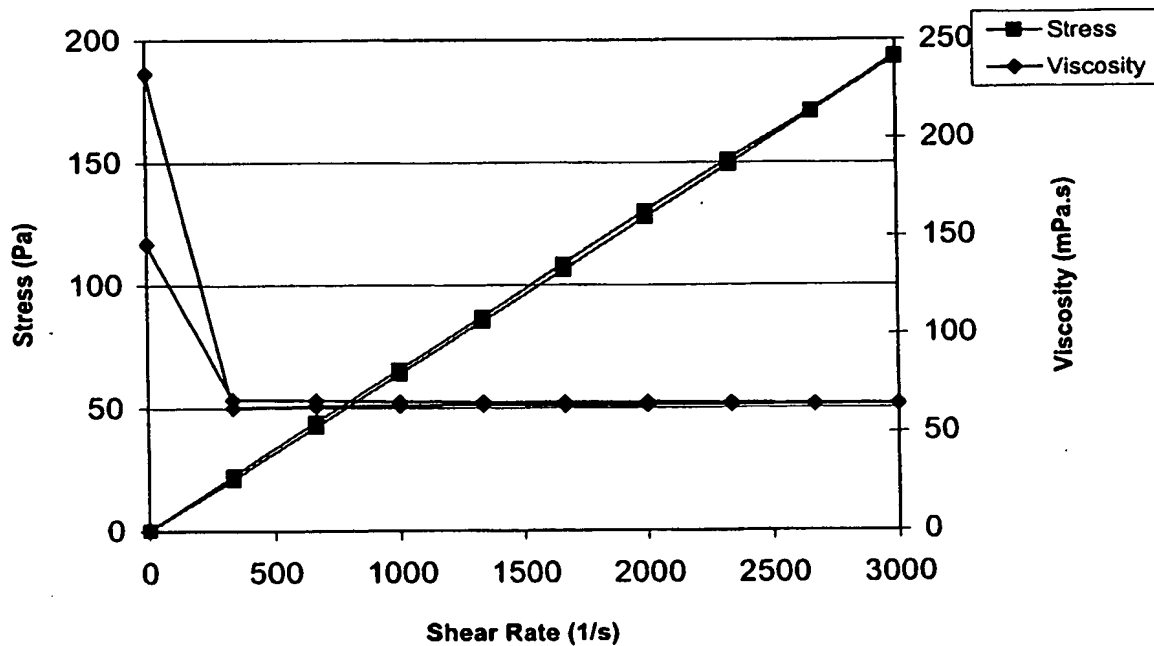
**EXAMPLE 3 - CONVECTION TREATMENT**

FIG. 9

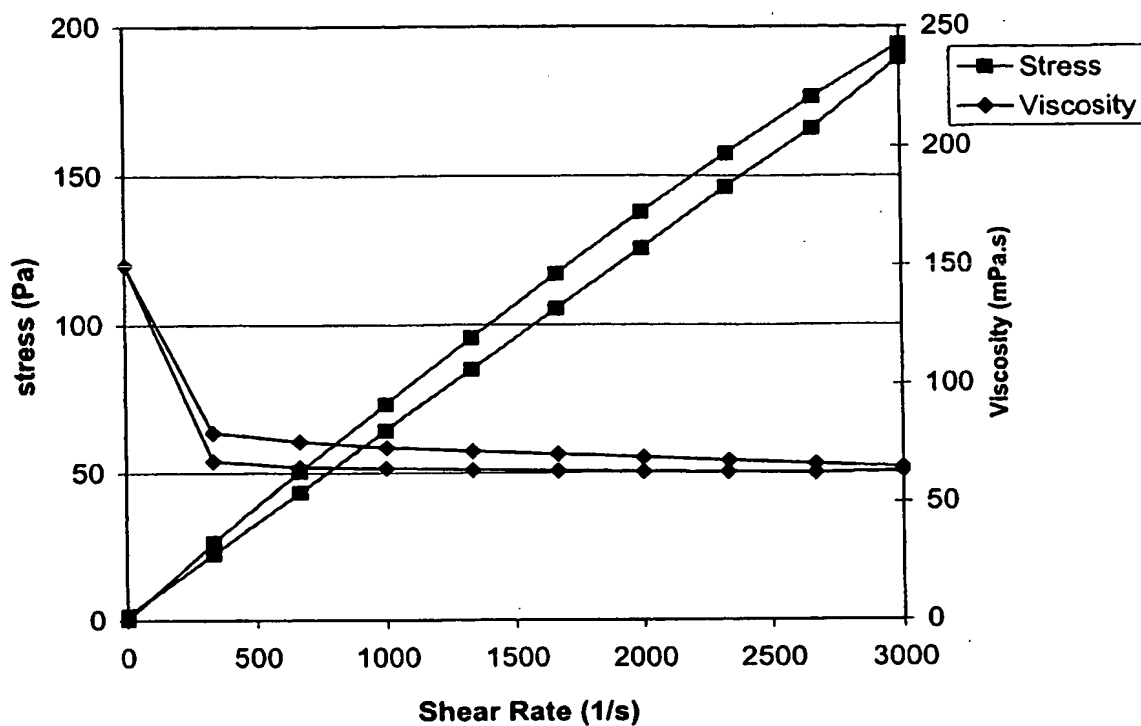
**EXAMPLE 3 - MICROWAVE TREATMENT**

FIG. 10

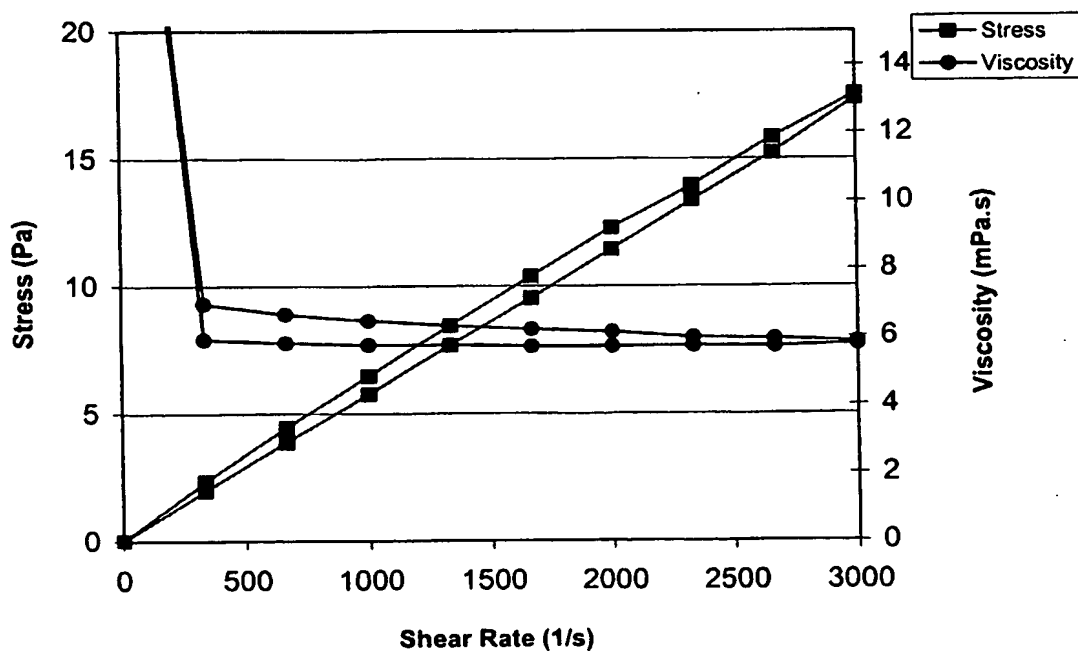
**EXAMPLE 4 - NO TREATMENT**

FIG. 11

## EXAMPLE 4 - CONVECTION TREATMENT

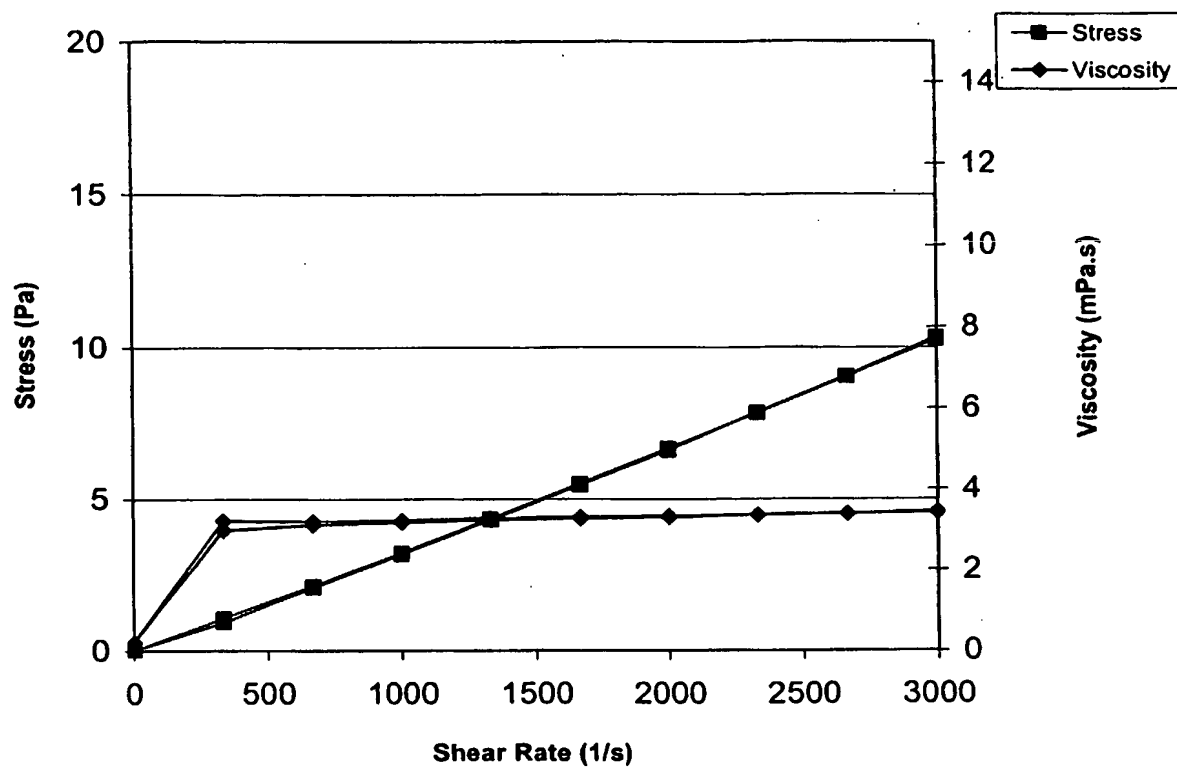


FIG.12

## EXAMPLE 4 - MICROWAVE TREATMENT

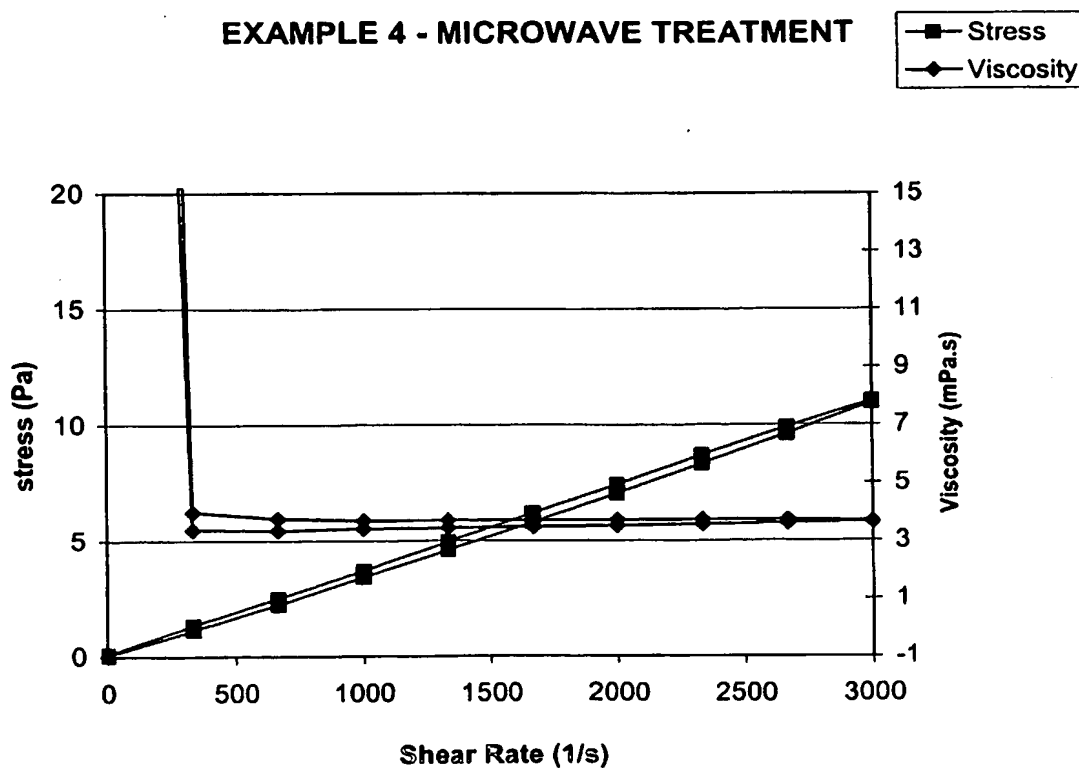


FIG. 13

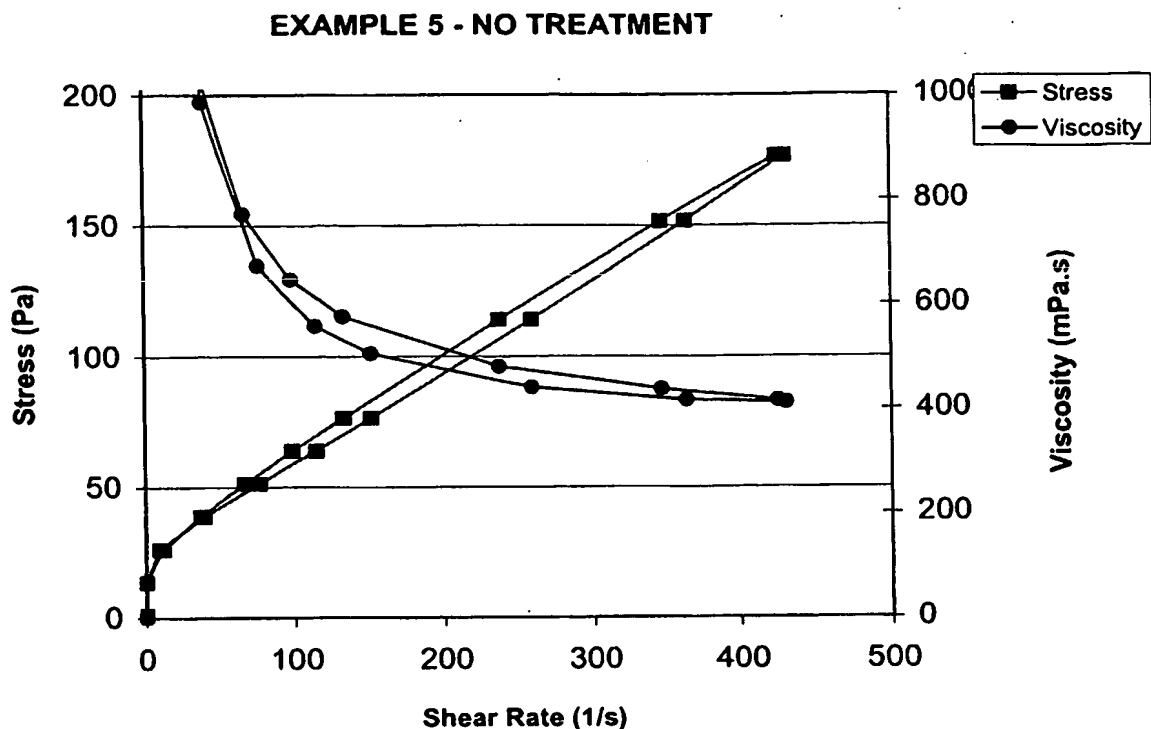
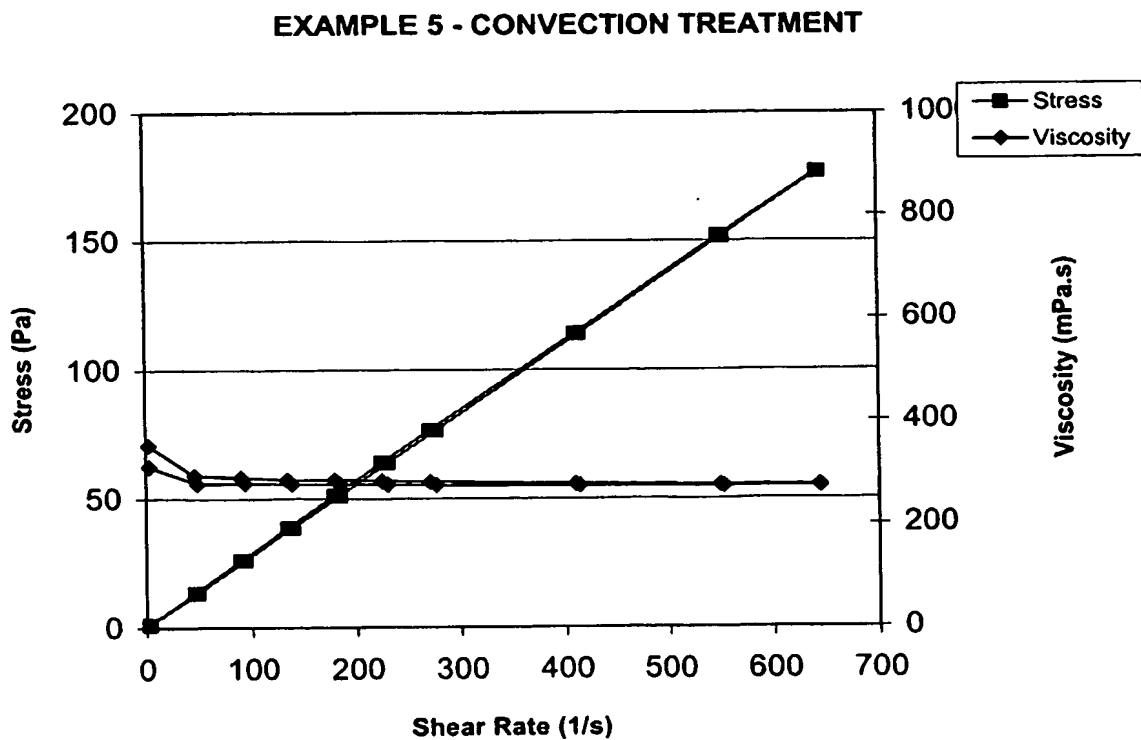
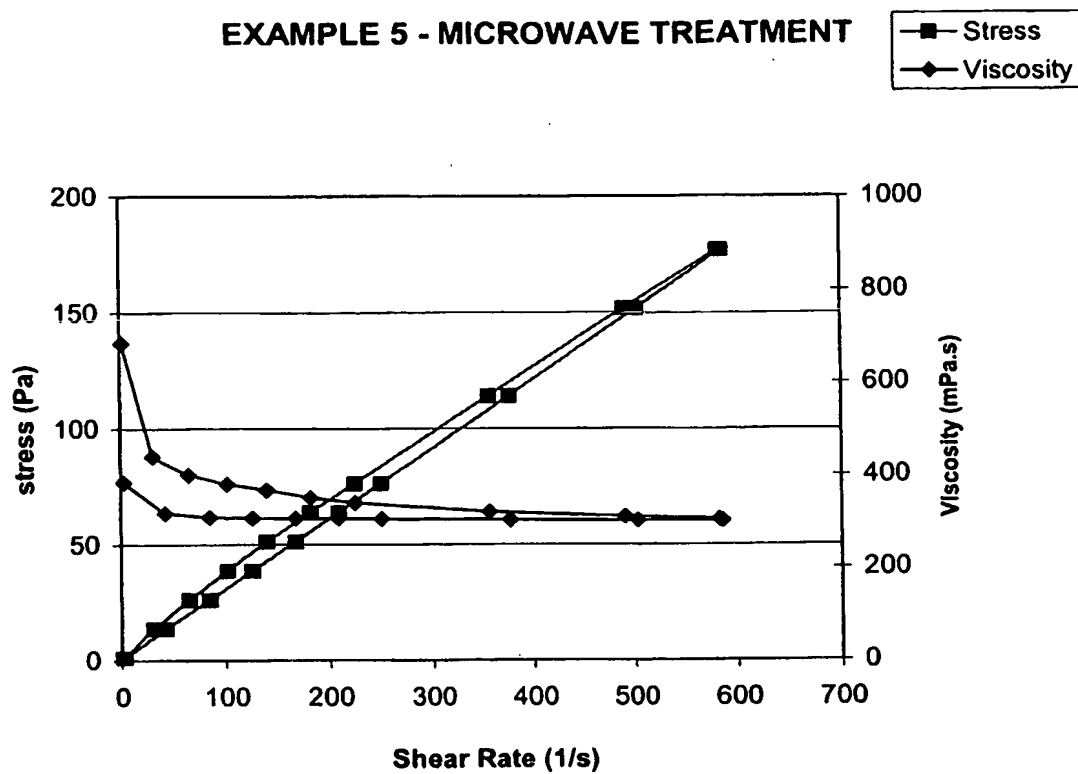


FIG. 14



8/8

FIG. 15



BEST AVAILABLE COPY